


THANK YOU FOR SELECTING A HUSKY FLOOR LINER FROM WINFIELD CONSUMER PRODUCTS

CARE AND USE INSTRUCTIONS

Your new liner is custom molded to fit your vehicle. Upon removal from the box your liner will not completely unroll and lay flat. This is normal and only temporary. Just place the liner on the floor or in the back of your vehicle with a weight in each corner (a book works well). After about 15 minutes, your liner will remain flat. In colder climates this “relaxing” may take longer; moving the liner to a heated area will accelerate the process.

Your liner is manufactured using an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409[®] or Glass Plus[®] work well. Use of Armor All[®], Son-of-a-Gun[®] or similar items is discouraged as these products make the liner slick.

INSTALLATION INSTRUCTIONS FOR YOUR TOYOTA COROLLA & MATRIX/PONTIACVIBE FRONT LINERS

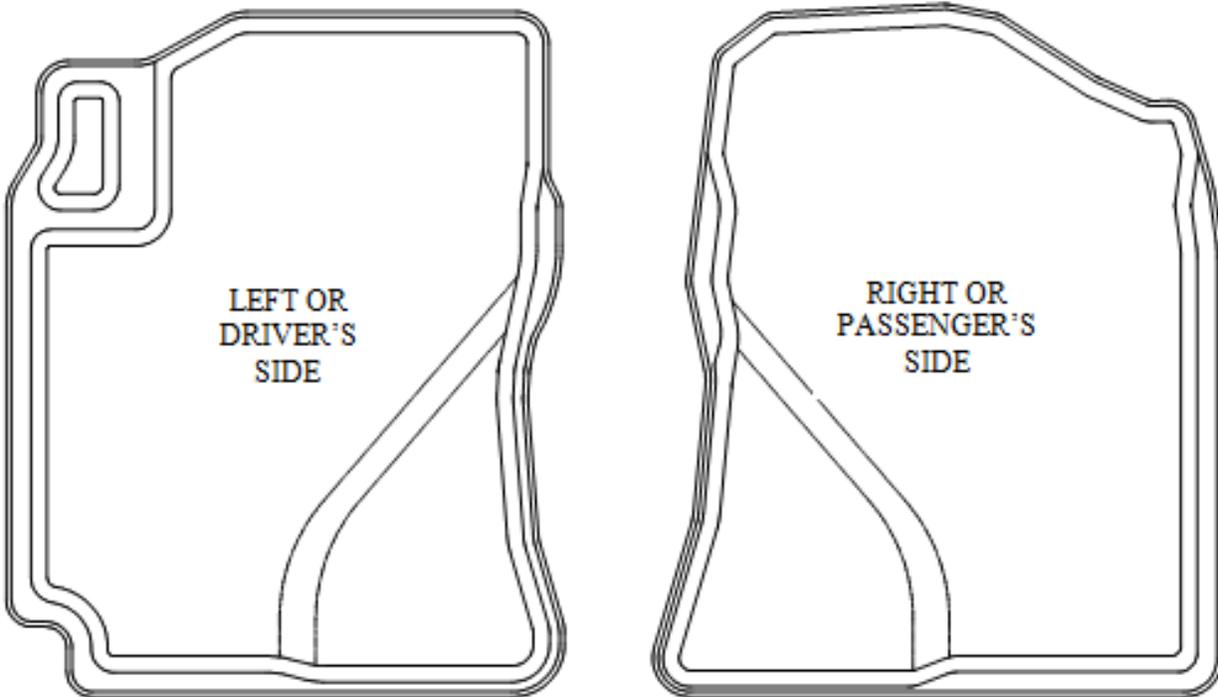

NOTE TO COROLLA OWNERS: IF YOUR COROLLA DOES NOT HAVE THE FACTORY ALL-WEATHER GUARD PACKAGE WHICH INCLUDES HEATER DUCTS UNDER THE FRONT SEATS, THIS LINER WILL NOT FIT YOUR VEHICLE CORRECTLY. YOU CAN TELL IF YOU HAVE THE HEATER DUCTS BY THE LARGE RAISED AREAS IN THE FRONT FLOOR PANS LOCATED ALONG THE TRANSMISSION TUNNEL EXTENDING AT AN ANGLE ACROSS THE FLOOR PANS. ATTACHED ON THE BACK OF THIS PAGE ARE PHOTOS OF THESE RAISED AREAS.

PHOTOS SHOWING THE RAISED AREAS OF THE DRIVER'S SIDE AND PASSENGER SIDE FLOOR PANS. IF YOUR VEHICLE DOES NOT THESE RAISED AREA, PART #3509 WILL NOT FIT CORRECTLY.

