



## FORD ESCAPE REAR MUD GUARD INSTALLATION INSTRUCTIONS

*Please read instructions thoroughly before installation.*

### Tools Required


- Socket Wrench / Combination Wrench

### Package Contents

- Driver & passenger side rear mud guard
- Instruction sheet

**NOTE:** It may be necessary to remove the wheels depending on the tools being used for installation.

1. Clean and degrease the mud guard location area on the fender before installation.
2. Remove existing fastener from locations A, B, and C.
3. Attach mud guard at locations A, B, and C to rear fender with existing fasteners. Check fit and level before tightening.

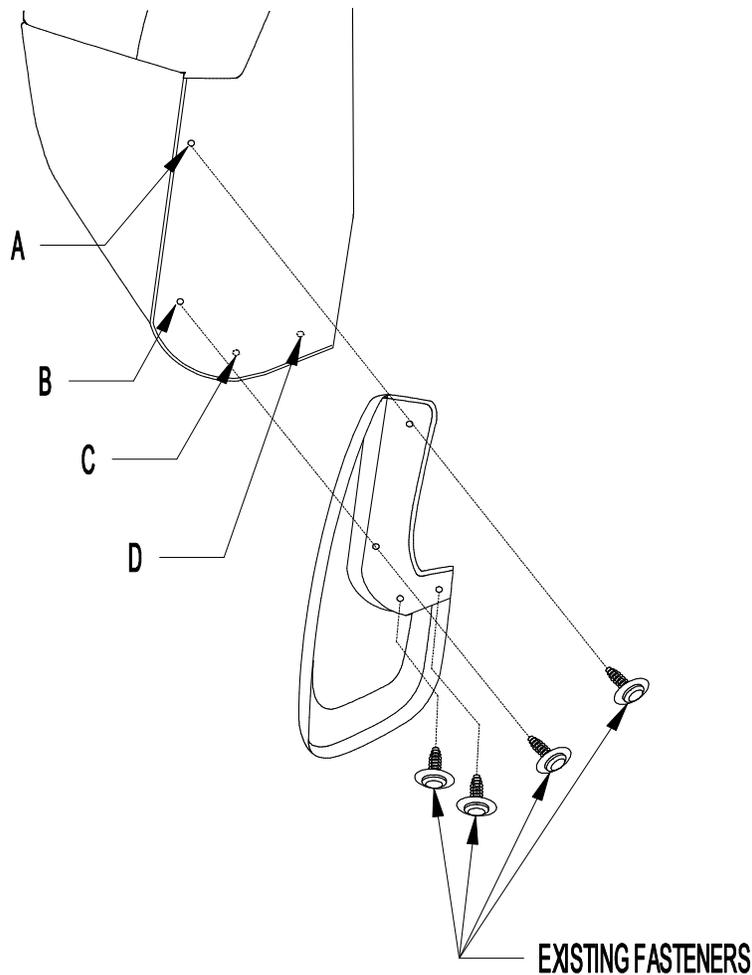

### PAINTING INSTRUCTIONS

**Note:** *If painting mud guards, perform a mud guard test fit to ensure correct fit and application prior to painting.*

1. Clean mud guard with a soap and water solution to remove dirt and other contaminants.
2. Sand painting surface with 320 grit sand paper.
3. Apply a coating of flexible primer-adhesion promoter.
4. Apply a flexible paint as directed by the paint manufacturer.